


NOTE: "BROOM" INTO PLACE DO NOT ROLL
 MEMBRANE SO THAT BEADS ARE
 FLATTENED 'PAPER THIN'.

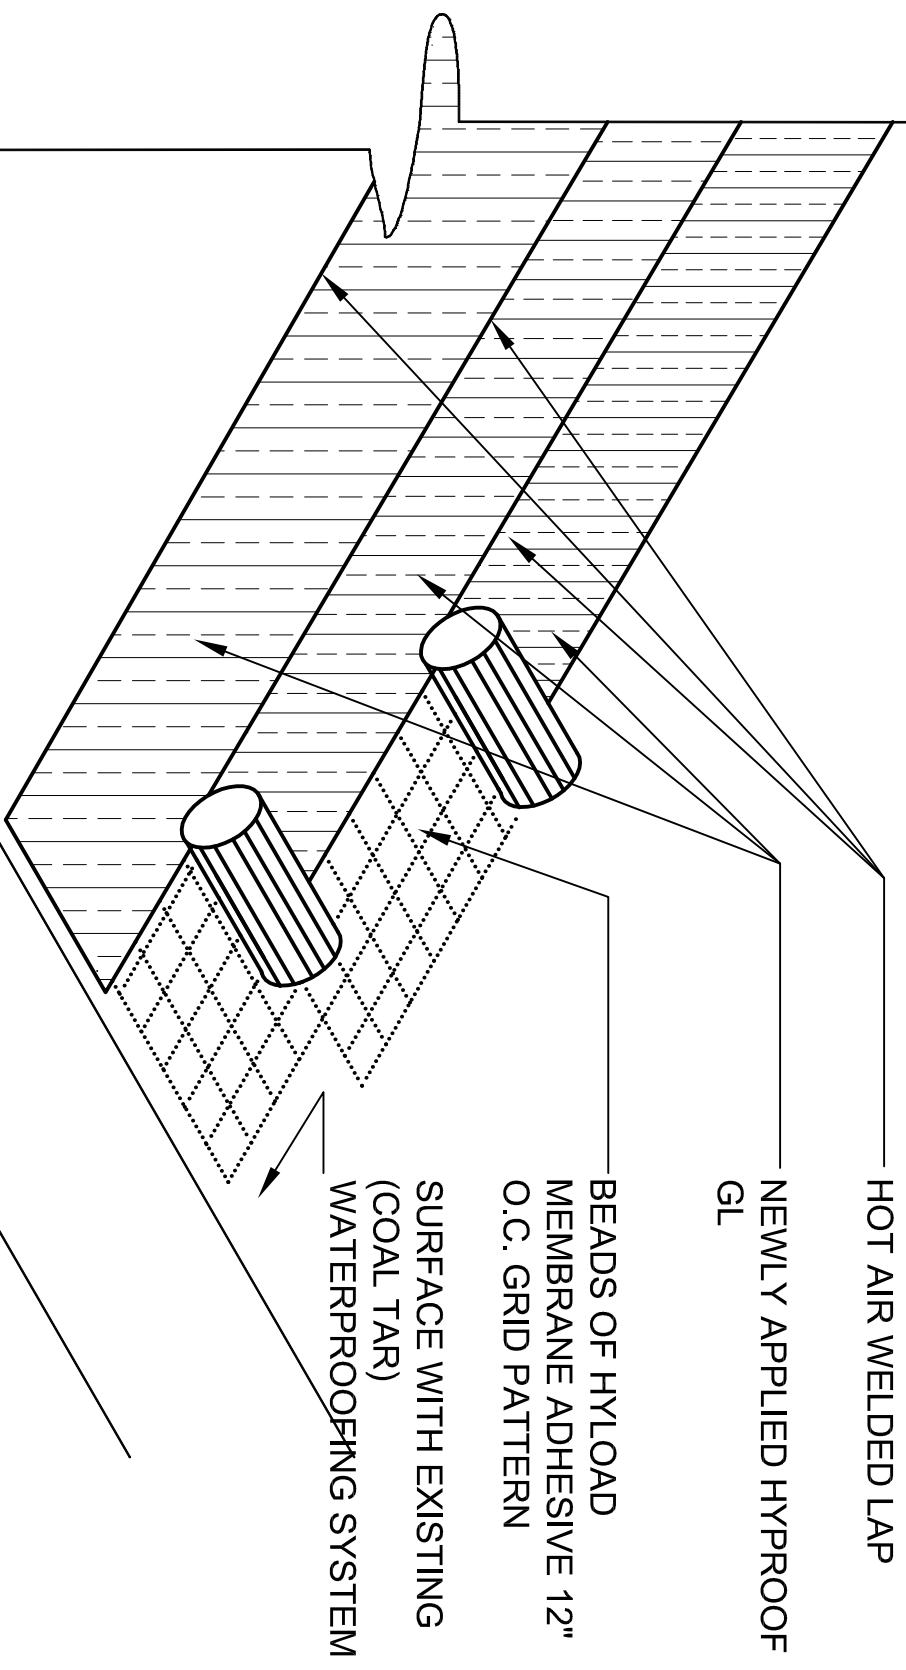

HYLOAD WATERPROOFING

RE-COVER OF EXISTING (COAL TAR)
 WATERPROOFING SYSTEM

SIZE A	DWG NO. WP030	REV A
SCALE NTS	DRAWN BY GDS	SHEET 1 of 1